

Copyright © 2018 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 61-120

TRAILER HITCH KIT

3/18/2019

FITMENT:

YAMAHA STAR VENTURE/STAR ELUDER 2018-NEWER

TOOLS NEEDED: 4MM ALLEN WRENCH

10MM WRENCH

12MM WRENCH

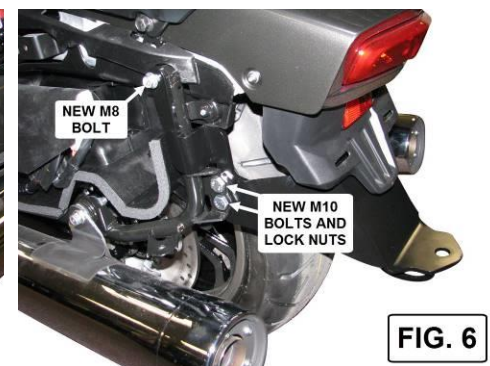
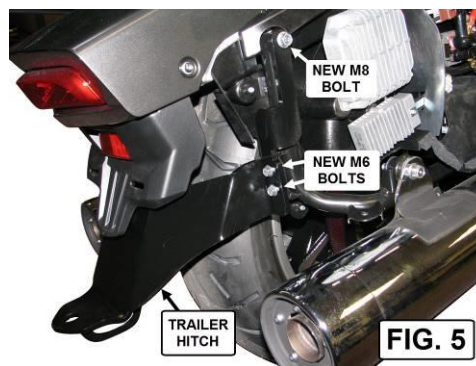
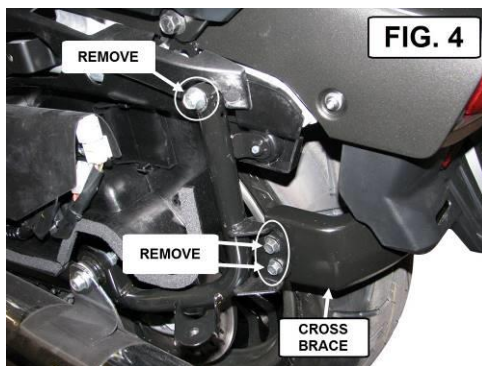
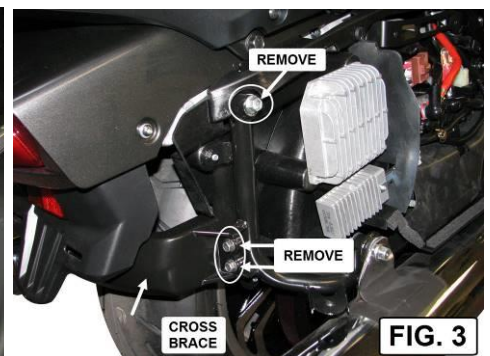
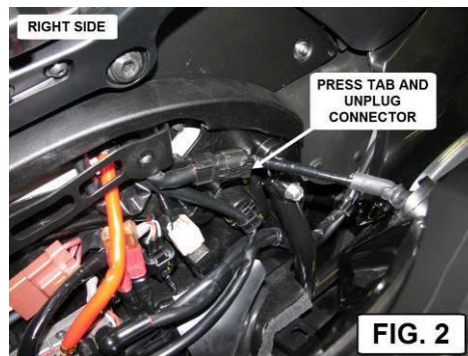
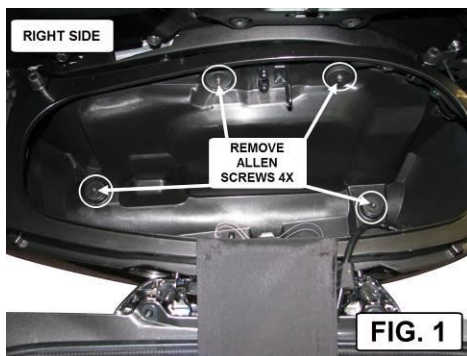
17MM WRENCH (2X)

28MM WRENCH OR ADJUSTABLE WRENCH

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. **USE REMOVABLE THREAD LOCK ON ALL FASTENERS**
ESTIMATED INSTALLATION TIME: 30 TO 45 MIN.

INSTALLATION:

1. STARTING ON THE RIGHT SIDE OPEN THE SADDLEBAG LID. USING A 4MM ALLEN WRENCH REMOVE THE FOUR SCREWS SHOWN IN FIG. 1.
2. WITH THE SCREWS REMOVED TILT THE SADDLEBAG OUT AND UNPLUG THE WIRE CONNECTOR SHOWN IN FIG. 2. SET SADDLEBAG ASIDE.
3. REPEAT STEPS 1 AND 2 TO REMOVE THE LEFT SADDLEBAG.
4. USING A 12MM WRENCH REMOVE THE TOP BOLTS SHOWN IN FIG. 3 AND FIG. 4. THESE BOLTS WILL NOT BE REUSED.
5. REMOVE THE CROSS BRACE BY USING A 10MM WRENCH TO REMOVE THE FOUR BOLTS SHOWN IN FIG. 3 AND FIG. 4. THESE BOLTS WILL NOT BE REUSED. THE CROSS BRACE WILL NOT BE REUSED AND WILL BE REPLACED BY THE NEW TRAILER HITCH.
6. PUT THE NEW TRAILER HITCH IN PLACE AS SHOWN IN FIG. 5.
7. INSTALL THE TWO NEW M8 X 50MM LONG BOLTS INCLUDED IN THE KIT IN THE TOP HOLES AS SHOWN IN FIG. 5 AND FIG. 6. DO NOT TIGHTEN.
8. ON THE RIGHT SIDE INSTALL THE TWO NEW M6 X 16MM LONG SCREWS SUPPLIED WITH THE KIT. SEE FIG. 5. DO NOT TIGHTEN.
9. ON THE LEFT SIDE INSTALL THE TWO M10 X 25MM LONG BOLTS FROM THE OUTSIDE. SEE FIG. 6. INSTALL THE M10 LOCKNUTS ON THE INSIDE.
10. USING A 12MM WRENCH TIGHTEN THE TWO TOP M8 X 50MM BOLTS.
11. USING TWO 17MM WRENCHES TIGHTEN THE TWO M10 X 25MM BOLTS AND NUTS ON THE LEFT SIDE.
12. USING A 10MM WRENCH TIGHTEN THE TWO M6 X 16MM BOLTS ON THE RIGHT SIDE.
13. REINSTALL BOTH SADDLEBAGS. BE SURE TO RECONNECT THE WIRING BEFORE INSTALLING THE SCREWS.
14. INSTALL THE BALL.

**NOTICE**

Big Bike Parts and it's Show Chrome Accessories[®] trailer hitch systems have been exclusively designed for use only on stock models. It will not work on any other motorcycle, and may not work or may interfere with aftermarket accessories. Any modification to any part of this hitch, including but not limited to altering the supplied hardware or improper installation could cause injury or death and immediately voids any and all warranties. Use of a trailer hitch on any motorcycle could void your motorcycle warranty and may increase your chances of injury or death. The end user of this product assumes all liability and responsibilities that may arise due to but not limited to, negligence from improper installation or use, including overloading, exceeding the recommended load limits of the motorcycle, trailer or trailer hitch and improper maintenance. Big Bike Parts total liability will be limited to the initial purchase price of this product or replacement of this product or replacement of this product at our discretion. 600 lbs. maximum GVWR, 60 lbs. maximum tongue weight, not to exceed GCWR for motorcycle.

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.