

Copyright © 2022 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. H44-2BK, H44-2RED,
H44-2BLUE

GRAB HANDLE COVER

6/23/2022


FITMENT: POLARIS SLINGSHOT 2015-NEWER

TOOLS NEEDED:

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.
ESTIMATED INSTALLATION TIME: 5 TO 10 MIN.

INSTALLATION:

1. REMOVE THE GRAB HANDLE FROM THE PACKAGE AND PLACE IT ACCORDING TO FIG. 1 ON THE PASSENGER GRAB HANDLE. START THE ZIPPER ENOUGH TO HOLD IN PLACE.
2. ROTATE THE GRAB HANDLE COVER INTO POSITION (FIG. 2).
3. CAREFULLY ZIP THE GRAB HANDLE COVER OVER THE GRAB HANDLE TO SECURE IT COMPLETELY.

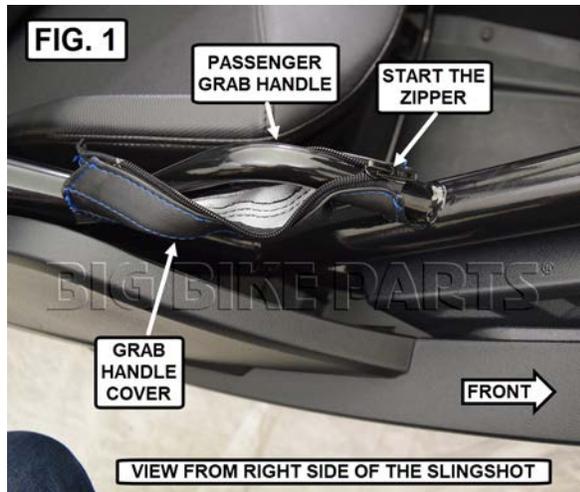

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.