

Copyright © 2022 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. H44-6BK, H44-6RED,
H44-6BLUE

E-BRAKE HANDLE COVER

REVISED 7/28/2022

FITMENT: POLARIS SLINGSHOT 2020-NEWER


TOOLS NEEDED: RUBBING ALCOHOL

CLEAN TOWEL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.
ESTIMATED INSTALLATION TIME: 5 TO 10 MIN.

INSTALLATION:

1. CLEAN THE AREA OF THE E-BRAKE HANDLE ACCORDING TO FIG. 1. LET DRY COMPLETELY.
2. INSTALL THE PIECE OF HOOK (MUST REMOVE FROM INSIDE OF E-BRAKE HANDLE COVER) ON THE E-BRAKE HANDLE ACCORDING TO FIG. 2.
3. START THE ZIPPER ON THE E-BRAKE HANDLE COVER (FIG. 3).
4. LIFT THE E-BRAKE HANDLE TO ENGAGE THE E-BRAKE AND ALLOW MORE ROOM UNDER THE HANDLE FOR INSTALLATION.
5. SLIDE THE E-BRAKE HANDLE COVER OVER THE END OF THE E-BRAKE HANDLE AND INTO POSITION (FIG. 4). BE SURE TO SECURE THE COVER WITH THE PIECE OF HOOK AND LOOP BY PRESSING FIRMLY IN PLACE.
6. CAREFULLY ZIP THE E-BRAKE HANDLE COVER COMPLETELY TO SECURE IT (FIG. 4).
7. LET SIT FOR 24 HOURS FOR THE ADHESIVE TO FULLY CURE BEFORE USE.

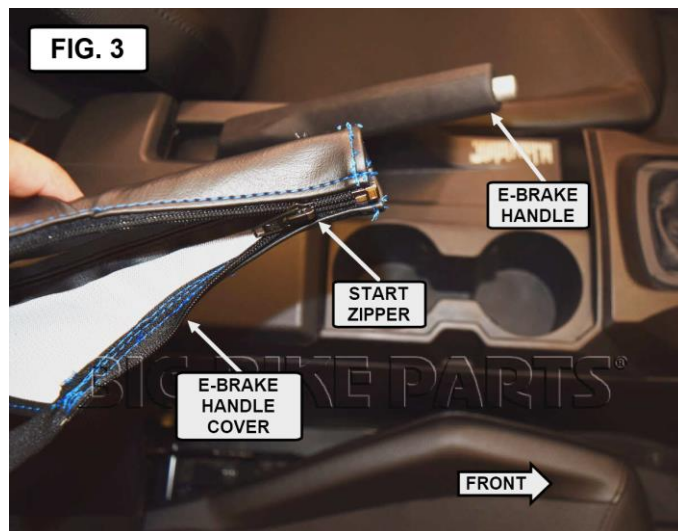

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

NOTICE

THIS IS AN ADHESIVE BACKED PRODUCT. CAUTION MUST BE TAKEN DURING INSTALLATION TO PROPERLY POSITION FOR ONE TIME PLACEMENT. REPEAT TRIALS WILL RESULT IN FAILURE OF THE ADHESIVE.