

Copyright © 2021 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-418

HANDLEBAR RISER

11/8/2021

FITMENT: CAN-AM RYKER 2019-NEWER

TOOLS NEEDED: LONG 5MM ALLEN SOCKET



IN-LB TORQUE WRENCH

REMOVABLE THREAD LOCK

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. **USE REMOVABLE THREAD LOCK ON ALL FASTENERS**
ESTIMATED INSTALLATION TIME: 30 TO 60 MIN.

INSTALLATION:

1. PLACE A CLEAN TOWEL OVER THE FUEL TANK TO PROTECT IT.
2. FLIP THE HANDLEBAR POSITION LOCKING TAB UP (FIG. 1).
3. USE MASKING TAPE TO MARK POSITION OF THE HANDLEBARS (FIG. 1).
4. REMOVE THE FOUR HANDLEBAR CLAMP SCREWS (FIG. 1). (BE SURE TO SUPPORT THE HANDLEBARS BEFORE REMOVING THE SCREWS COMPLETELY)
5. REMOVE THE TWO TOP CLAMPS (FIG. 1).
6. CAREFULLY LAY THE HANDLEBARS ON THE TOWEL TO AVOID SCRATCHING ANY OF THE PANELS.
7. REMOVE THE HANDLEBAR RISERS FROM THE PACKING AND INSTALL THEM ACCORDING TO FIG. 2. (TIGHTEN THE SCREWS TO OEM TORQUE SPECS)
8. FLIP THE HANDLEBAR POSITION LOCKING TAB DOWN TO LOCK THE HANDLEBAR MOUNTS IN POSITION.
9. PLACE THE HANDLEBARS ON TOP OF THE HANDLEBAR RISERS AND INSTALL THE TOP CLAMPS AND SCREWS REMOVED IN STEP 4 AND 5. MAKE SURE TO USE THE MASKING TAPE PLACED ON THE BARS FROM STEP 3 TO CENTER THE HANDLEBARS ON THE RISER MOUNTS. (TIGHTEN THE SCREWS TO OEM TORQUE SPECS) NOTE: REMOVE MASKING TAPE BEFORE TIGHTENING THE SCREWS COMPLETELY.

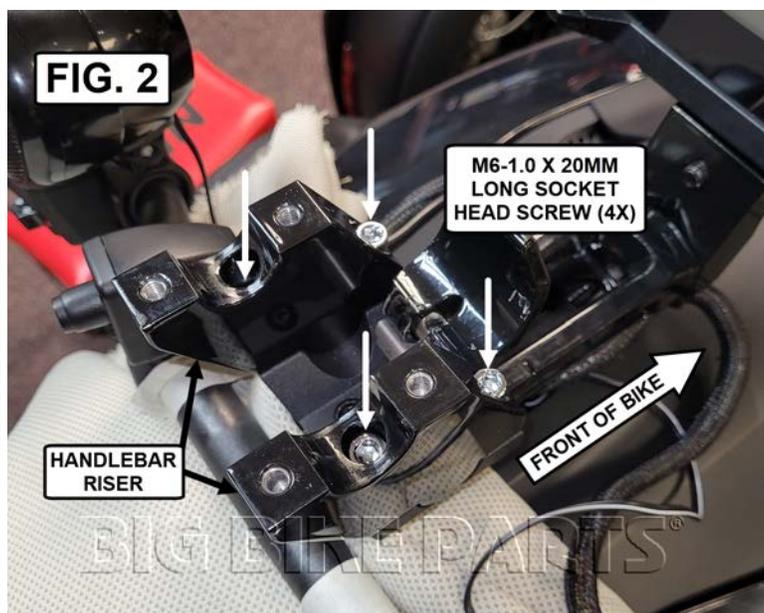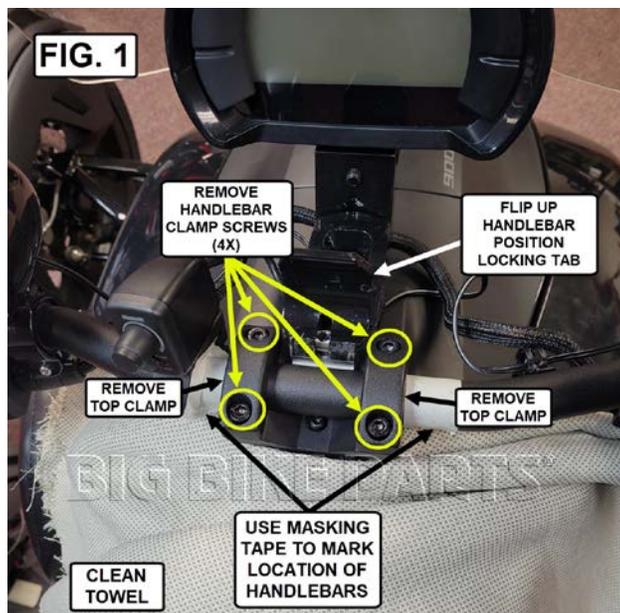

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

WARNING

THREADLOCK CAUSES PLASTICS TO CRACK, BREAK OR BECOME BRITTLE. WHEN USING THREADLOCK TO INSTALL HARDWARE WITH PLASTIC COMPONENTS, ONLY APPLY TO METAL COMPONENTS. IT IS CRITICAL THAT ANY EXCESS THREADLOCKER OR SPILLAGE IS CLEANED COMPLETELY FROM PLASTIC COMPONENTS IMMEDIATELY BEFORE DRYING. A DAMP TOWEL OR RAG IS THE BEST WAY TO ACHIEVE THIS. IF EXCESS THREADLOCKER IS NOT CLEANED UP RIGHT AWAY, IT COULD LEAD TO DAMAGED PRODUCTS AND VOID WARRANTY.