

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-941/52-941BK

FRONT FENDER SIDE ACCENT

1/2/2019

FITMENT:

HONDA GOLDWING/GOLDWING TOUR 2018-NEWER

TOOLS NEEDED:

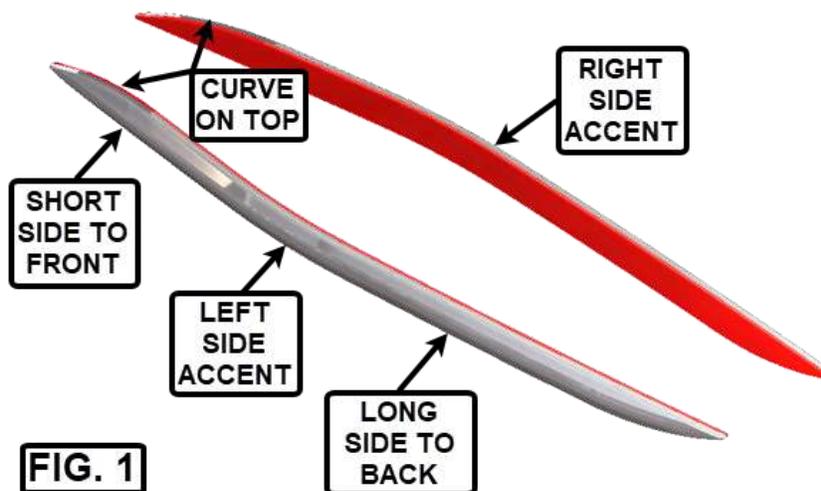
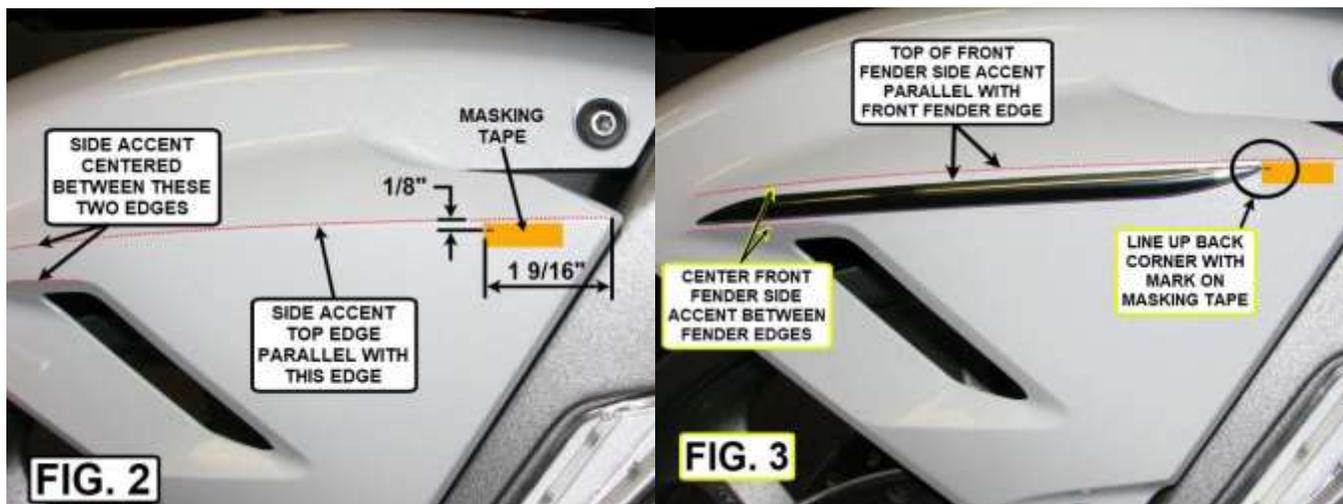
MASKING TAPE

RUBBING ALCOHOL

CLEAN RAG

**PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.****ESTIMATED INSTALLATION TIME: 15 TO 30 MIN.****INSTALLATION:**

1. DETERMINE THE LEFT AND RIGHT FRONT FENDER ACCENTS USING FIG. 1. SET THE RIGHT FRONT FENDER SIDE ACCENT ASIDE FOR NOW.
2. PLACE MASKING TAPE ON THE LEFT SIDE OF THE FENDER AS SHOWN IN FIG. 2. (LEFT EDGE OF THE MASKING TAPE IS 1-9/16" FROM THE FENDER CORNER SHOWN IN FIG. 2)
3. PLACE A MARK 1/8" DOWN FROM THE FENDER EDGE AS SHOWN IN FIG. 2. (THE TOP OF THE FRONT FENDER SIDE ACCENT WILL LINE UP WITH THIS MARK WHEN INSTALLED)
4. CLEAN THE SIDE OF THE FRONT FENDER WHERE THE SIDE ACCENT WILL BE INSTALLED WITH RUBBING ALCOHOL AND A CLEAN RAG.
5. LET THE FRONT FENDER DRY COMPLETELY.
6. PEEL THE MASKING FROM THE BACK OF THE LEFT FRONT FENDER SIDE ACCENT.
7. SEE FIG. 3 FOR PLACEMENT OF THE LEFT FRONT FENDER SIDE ACCENT.
8. CAREFULLY PRESS THE LEFT SIDE ACCENT INTO PLACE KEEPING THE TOP EDGE PARALLEL WITH THE EDGE OF THE FENDER (FIG. 3).
9. REPEAT ON THE RIGHT SIDE.
10. LET TAPE CURE FOR 24 HOURS BEFORE USING THE BIKE.

**FIG. 1****FIG. 2****FIG. 3**