

Copyright © 2015 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. H41-157BK &  
H41-158BK

FRONT FAIRING BRA SET

6/24/2015

CAN-AM SPYDER RT 2010-NEWER

TOOLS NEEDED: 10MM WRENCH




LINT FREE TOWEL

RUBBING ALCOHOL

**PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.**

**INSTALLATION:**

1. OPEN THE FRONT TRUNK LID AND USING A 10MM WRENCH REMOVED TO FOUR HEX BOLTS FROM THE TRUNK HINGE.
  2. CAREFULLY REMOVE THE TRUNK LID AND LAY IT ON A CLEAN SURFACE UPSIDE DOWN.
  3. USING RUBBING ALCOHOL AND A LINT FREE TOWEL CLEAN THE INSIDE OF THE FRONT OF THE LID AND LET DRY. SEE FIG. 1.
  4. REMOVE THE THREE PIECES OF HOOK FROM THE BOTTOM STRAPS OF THE UPPER BRA.
  5. REMOVE THE MASKING AND PLACE THE THREE PIECES OF HOOK ON THE LID AS SHOWN IN FIG. 1. PRESS THEM TIGHT TO THE LID TO SET THE ADHESIVE.
  6. USING RUBBING ALCOHOL CLEAN THE AREA FOR THE OTHER TWO STRAPS SHOWN IN FIG. 2. LET DRY.
  7. LEAVE THE HOOK ATTACHED TO THE STRAPS AND REMOVE THE MASKING FROM BOTH PIECES.
  8. PULL BOTH OF THEM TIGHT AND ATTACH THEM TO THE INSIDE OF THE TRUNK LID AS SHOWN IN FIG. 2. PRESS THEM TIGHT TO THE LID TO SET THE ADHESIVE.
  9. TO INSTALL THE LOWER BRA CLEAN THE AREA SHOWN IN FIG. 3 WITH RUBBING ALCOHOL AND A LINT FREE TOWEL. LET DRY.
  10. ALSO CLEAN THE PAINTED AREA ON BOTH SIDES NEXT TO THE RADIATOR GRILLES. SEE FIG. 4.
- NOTE: DIAGRAMS BELOW ARE OF A 2014 MODEL. 2010-2013 CLEAN ABOVE AND BELOW THE CENTER TRIM ON BOTH SIDES.*
11. REMOVE THE TOP TWO PIECES OF HOOK FROM THE LOWER BRA. ATTACH THEM TO THE SPYDER AS SHOWN IN FIG. 3 AND PRESS THEM TIGHT.
  12. REMOVE THE FOUR REMAINING PIECES OF HOOK FROM THE LOWER BRA AND ATTACH THEM AS SHOWN IN FIG. 4. MAKE SURE YOU ATTACH THEM TO THE PAINTED SURFACE AND NOT THE ROUGH BLACK PLASTIC IN FRONT OF EACH GRILLE.
  13. ATTACH THE TOP OF THE LOWER BRA FIRST. THEN PULL BOTH SIDES TIGHT AND ATTACH THE LOOP TO THE HOOK.
  14. REINSTALL THE TRUNK LID AND CLOSE.
  15. LET GLUE ON HOOK CURE FOR 24 HOURS BEFORE USING SPYDER.
  16. TO TAKE THE BRA OFF FOR WASHING SIMPLY OPEN THE FRONT TRUNK AND REMOVE BOTH PIECES.

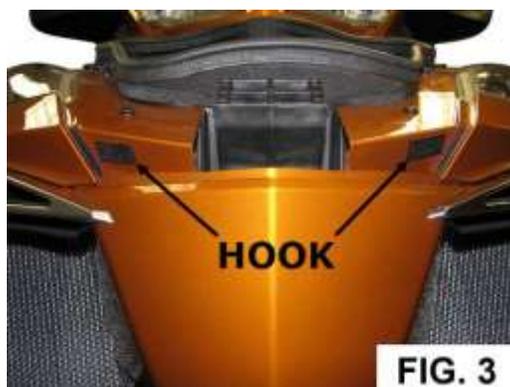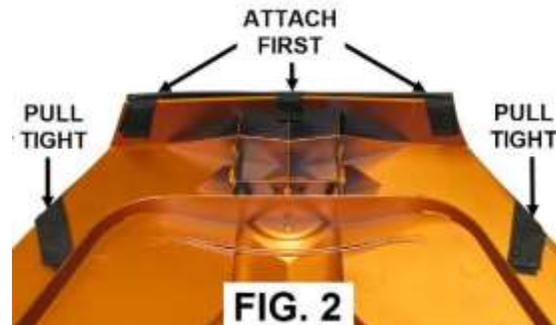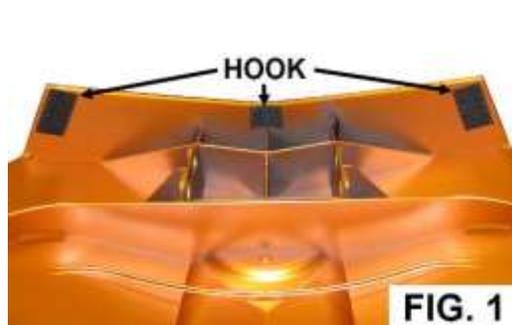

Scan code with  
your smartphone  
to view video

