

BIG BIKE PARTS®

INSTALLATION INSTRUCTIONS

Copyright © 2020 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. H41-159BK

TRUNK ORGANIZER

FITMENT: CAN-AM F3T LTD 2016-NEWER & RT LTD 2020-NEWER

6/4/2020

TOOLS NEEDED: T20 TORX DRIVER

RUBBING ALCOHOL


CLEAN RAG/TOWEL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

ESTIMATED INSTALLATION TIME: 10 TO 15 MIN.

INSTALLATION:

1. OPEN THE TRUNK LID.
2. USING A T20 TORX DRIVER REMOVE THE TWO SCREWS SHOWN IN FIG. 1.
3. USING RUBBING ALCOHOL AND A CLEAN RAG CLEAN THE AREAS SHOWN IN FIG. 1. LET ALCOHOL DRY COMPLETELY BEFORE NEXT STEP.
4. REMOVE THE THREE 4" PIECES OF HOOK FROM THE ORGANIZER AND ATTACH THEM TO THE TRUNK AS SHOWN IN FIG. 2.
5. INSTALL THE ORGANIZER AS SHOWN IN FIG. 3 AND REINSTALL THE TWO SCREWS THROUGH THE HOLES IN THE ORGANIZER. TIGHTEN.

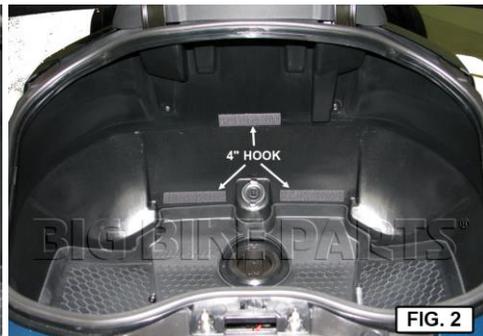

BIG BIKE PARTS®

INSTALLATION INSTRUCTIONS

Copyright © 2020 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. H41-159BK

TRUNK ORGANIZER

FITMENT: CAN-AM SPYDER F3T & LTD WITH OEM TRUNK 2016-NEWER

6/4/2020

TOOLS NEEDED: T20 TORX DRIVER

RUBBING ALCOHOL

CLEAN RAG/TOWEL

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

ESTIMATED INSTALLATION TIME: 10 TO 15 MIN.

INSTALLATION:

1. OPEN THE TRUNK LID.
2. USING A T20 TORX DRIVER REMOVE THE TWO SCREWS SHOWN IN FIG. 1.
3. USING RUBBING ALCOHOL AND A CLEAN RAG CLEAN THE AREAS SHOWN IN FIG. 1. LET ALCOHOL DRY COMPLETELY BEFORE NEXT STEP.
4. REMOVE THE THREE 4" PIECES OF HOOK FROM THE ORGANIZER AND ATTACH THEM TO THE TRUNK AS SHOWN IN FIG. 2.
5. INSTALL THE ORGANIZER AS SHOWN IN FIG. 3 AND REINSTALL THE TWO SCREWS THROUGH THE HOLES IN THE ORGANIZER. TIGHTEN.

