



INSTALLATION INSTRUCTIONS

Copyright © 2022 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. H44-7DBK, H44-7DBLU, H44-7DRED, H44-7PBK, H44-7PBLU, H44-7PRED

DESCRIPTION: CONSOLE SIDE ORGANIZER

ESTIMATED INSTALLATION TIME: 10 TO 20 MIN



FITMENT: POLARIS SLINGSHOT 2015-NEWER

TOOLS NEEDED:	T40 TORX	RUBBING ALCOHOL	CLEAN LINT FREE TOWEL		
INCLUDED:	CONSOLE SIDE ORGANIZER				

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

INSTALLATION:

1. USE A T40 TORX TO REMOVE THE 7 SCREWS SECURING THE FRONT AND BOTTOM OF THE CONSOLE SIDE PANEL (FIG. 1). **NOTE: THESE INSTRUCTIONS SHOW DRIVER SIDE FOR REFERENCE. IF INSTALLING THE PASSENGER SIDE USE FIG. 1A FOR REFERENCE.**
2. USE RUBBING ALCOHOL AND A LINT FREE TOWEL TO CLEAN THE LEFT CONSOLE SIDE PANEL AS SHOWN IN FIG. 1. (FIG. 1A FOR PASSENGER SIDE) **IF PANELS HAVE BEEN CLEANED WITH PRODUCTS LIKE BIKE SPIRITS, ARMOR ALL, SHINE ARMOR, ETC. YOU MAY HAVE TO CLEAN THE PANELS WITH RUBBING ALCOHOL MULTIPLE TIMES IN ORDER TO REMOVE ANY COATING OR RESIDUE FOR PROPER ADHESION.**
3. CAREFULLY LIFT THE FLOOR PANEL (FIG. 2) ENOUGH TO SLIDE THE DRIVER CONSOLE SIDE ORGANIZER BEHIND THE FLOOR PANEL (FIG. 2).
4. LINE UP THE THREE HOLES ON THE BOTTOM AND THREE HOLES ON THE FRONT OF THE CONSOLE SIDE ORGANIZER WITH THE HOLES IN THE FLOORBOARD AND CONSOLE SIDE PANEL.
5. REINSTALL THE 7 SCREWS REMOVED IN STEP 1 USING A T40 TORX (FIG. 2) MAKING SURE THE SCREWS GO THROUGH EACH HOLE IN THE PASSENGER CONSOLE SIDE ORGANIZER. BE SURE NOT TO OVER TIGHTEN.
6. STARTING WITH THE HOOK AND LOOP ALONG THE TOP OF THE PASSENGER CONSOLE SIDE ORGANIZER, CAREFULLY PEEL THE BACKER AND FIRMLY PRESS INTO POSITION AGAINST THE CONSOLE SIDE PANEL.
7. MOVE TO THE HOOK AND LOOP AT THE REAR OF THE PASSENGER CONSOLE SIDE ORGANIZER, PEEL THE BACKER AND CAREFULLY PRESS INTO POSITION AGAINST THE CONSOLE SIDE PANEL.
8. CAREFULLY SEPARATE THE HOOK AND LOOP MAKING SURE NOT TO PEEL THE ADHESIVE BACKED HOOK FROM THE CONSOLE SIDE PANEL. PRESS FIRMLY ALONG THE LENGTH OF THE HOOK TO AID WITH ADHESION. LET SIT FOR 24 HOURS FOR ADHESIVE TO CURE.
9. REATTACH THE ORGANIZER TO THE HOOK STRIPS.

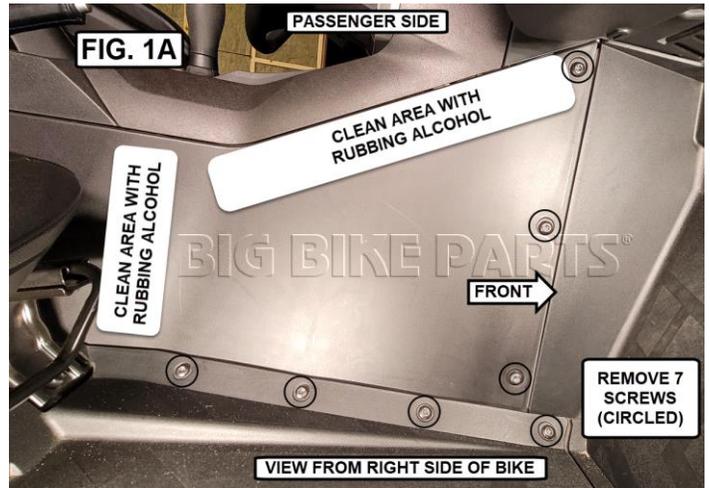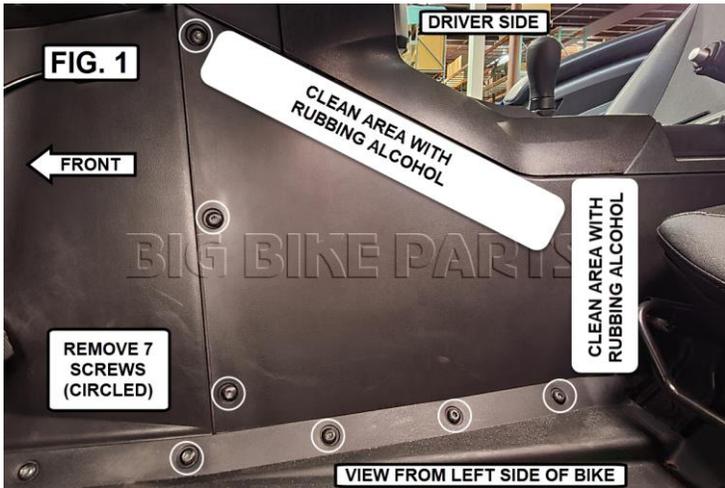

NOTICE
 THIS IS AN ADHESIVE BACKED PRODUCT. CAUTION MUST BE TAKEN DURING INSTALLATION TO PROPERLY POSITION FOR ONE TIME PLACEMENT. REPEAT TRIALS WILL RESULT IN FAILURE OF THE ADHESIVE.

NOTICE
 IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.