

Copyright © 2019 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 52-963

ENGINE SIDE COVERS

12/26/2019

FITMENT: HONDA GOLDWING 2019-NEWER





TOOLS NEEDED: 5MM ALLEN WRENCH

REMOVABLE THREAD LOCK

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. USE REMOVABLE THREAD LOCK ON ALL FASTENERS.
ESTIMATED INSTALLATION TIME: 10 TO 15 MIN.

INSTALLATION:

1. STARTING ON THE LEFT SIDE OF THE BIKE, PULL SLIGHTLY OUT ON THE BOTTOM AND REAR CORNERS OF THE LEFT OEM SIDE COVER TO RELEASE FROM THE RUBBER GROMMETS (FIG. 1). **DO NOT PULL TOO FAR OUT ON THE BOTTOM OF THE LEFT SIDE COVER OR THE UPPER TAB WILL BREAK.**
2. SLIDE THE LEFT OEM SIDE COVER UP AND OUT TO REMOVE IT FROM THE BIKE.
3. USE FIG. 2 TO DETERMINE THE LEFT AND RIGHT ENGINE SIDE COVERS. SET THE RIGHT ENGINE SIDE COVER ASIDE FOR NOW.
4. INSERT THE TAB ON THE UPPER BACK SIDE OF THE LEFT ENGINE SIDE COVER INTO THE RUBBER GROMMET ON THE BIKE.
5. LINE UP THE PINS ON THE REAR AND BOTTOM OF THE LEFT SIDE ENGINE COVER WITH THE RUBBER GROMMETS AND PRESS IN PLACE.
6. MOVE TO THE RIGHT SIDE OF THE BIKE AND REMOVE THE TWO SCREWS HOLDING THE RIGHT SIDE COVER ON PLACE (FIG. 3).
7. REMOVE THE RIGHT SIDE COVER.
8. SLIDE THE RIGHT ENGINE SIDE COVER BEHIND THE RIGHT SHELTER COVER AND LOWER COWL (FIG. 4).
9. ALIGN THE TAB ON THE RIGHT ENGINE SIDE COVER WITH THE HOLE IN THE FRAME. INSERT THE TWO OEM SCREWS REMOVED IN STEP 6 (FIG. 4).

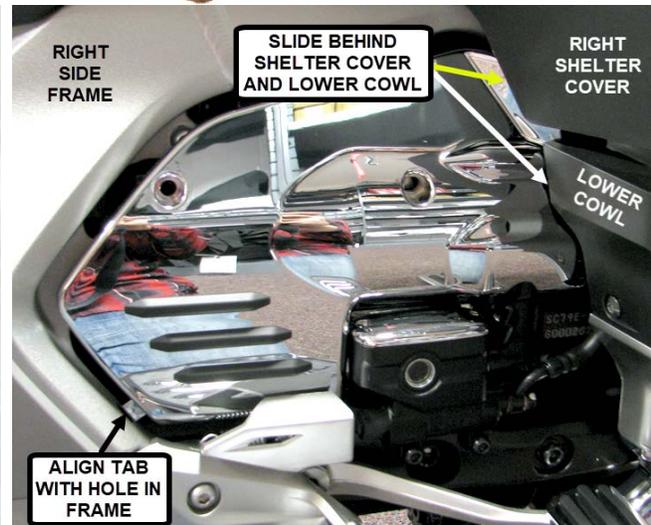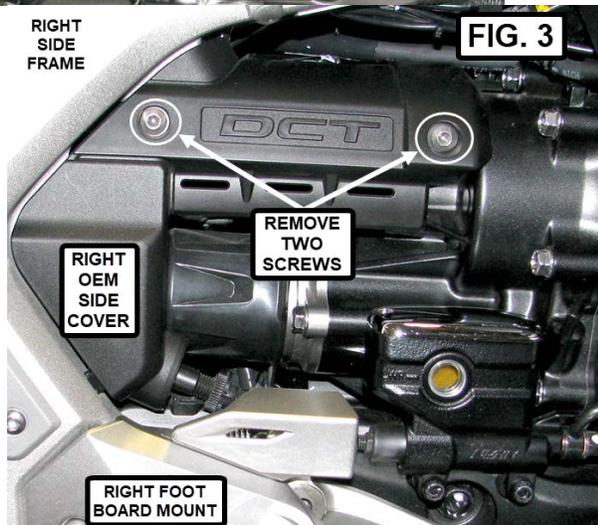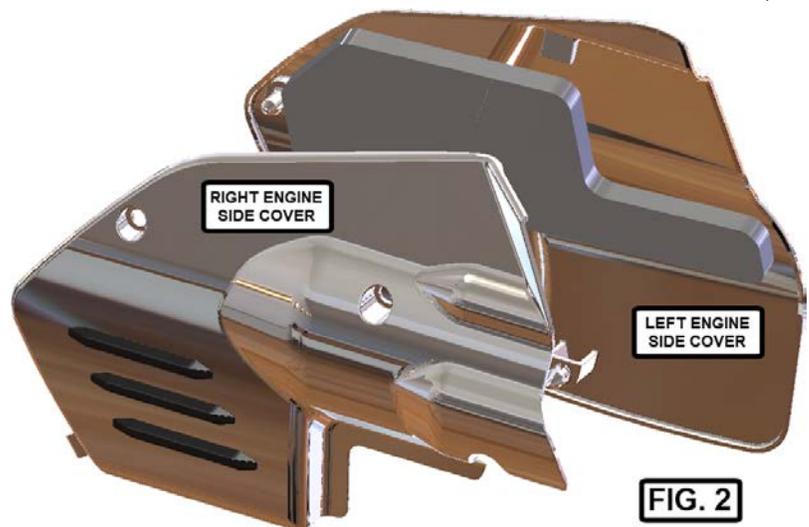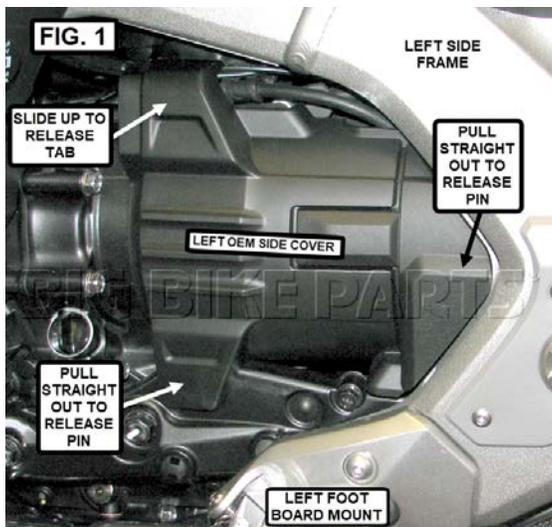

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.