

BIG BIKE PARTS®

Copyright© 2023 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

INSTALLATION INSTRUCTIONS**PART NO. 91-307/91-307BK****VANTAGE TOUR RACK****HARLEY-DAVIDSON TOUR PACKS**

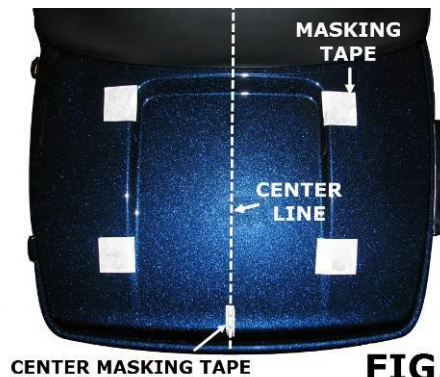
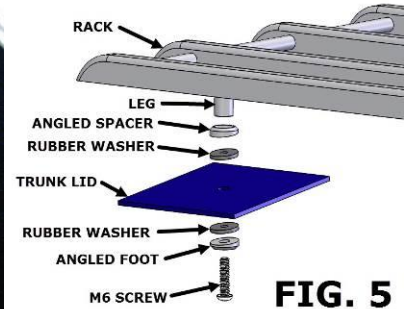
TOOLS NEEDED:	MASKING TAPE	PENCIL/MARKER	DRILL	5/16" (8MM) DRILL BIT
	TAPE MEASURE	REMOVABLE THREAD LOCK	10MM WRENCH	10MM WRENCH

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

NOTE: IF REPLACING AN EXISTING TUBULAR RACK YOU MAY NEED TO MAKE THE HOLES IN THE LID 5/16" DIAMETER BEFORE MOUNTING THIS RACK.

INSTALLATION:

1. CLEAN ALL DIRT AND DEBRIS FROM THE LID OF THE TOUR PACK.
2. USING A TAPE MEASURE FIND THE CENTER OF THE TRUNK LID FROM RIGHT TO LEFT AND MARK IT WITH A SMALL PIECE OF MASKING TAPE. SEE **FIG. 1**.
3. CUT FOUR PIECES OF MASKING TAPE ABOUT 1-1/2 TO 2 INCHES SQUARE.
4. TAKE THE RACK FROM THE PACKAGE AND PLACE IT ON THE TRUNK LID. SEE **FIG. 2**.
5. USE THE TAPE MEASURE AND CENTER THE RACK RIGHT TO LEFT ON THE TRUNK LID.
6. ONCE YOU HAVE IT POSITIONED AS YOU WANT IT LIFT UP ONE SIDE AT A TIME AND PLACE THE MASKING TAPE UNDER EACH LEG OF THE RACK. SEE **FIG. 2**.
7. USING A PENCIL OR MARKER DRAW A CIRCLE AROUND EACH LEG OF THE RACK BEING CAREFUL NOT TO MOVE IT. SEE **FIG. 3**.
8. REMOVE THE RACK AND WITH YOUR PENCIL/MARKER DRAW AN "X" INSIDE THE CIRCLE TO FIND THE CENTER. SEE **FIG. 4**.
9. USING A DRILL AND A 5/16" (8MM) DRILL BIT MAKE A HOLE THROUGH THE LID AT THE INTERSECTION IN EACH CIRCLE.
10. REMOVE THE MASKING TAPE FROM THE TRUNK LID AND CLEAN THE LID AGAIN. ALSO REMOVE ANY SHARP EDGES OR LOOSE SHAVINGS ON THE HOLES.
11. LOOSELY INSTALL THE RACK ON THE TRUNK LID WITH THE HARDWARE IN THE ORDER SHOWN IN **FIG. 5**.
12. ROTATE THE ANGLED SPACERS SO THAT THE BEST MATCH THE ANGLE OF THE TRUNK LID AND THE LEGS ON THE RACK.
13. CHECK TO MAKE SURE THE RACK WILL SIT PROPERLY ON THE LID WITH THE BOLT LOOSELY INSTALLED.
14. APPLY A SMALL AMOUNT OF THREAD LOCKING COMPOUND TO EACH BOLT AND CAREFULLY TIGHTEN.
15. BE VERY CAREFUL NOT TO OVER TIGHTEN THE BOLTS.

**FIG. 1****FIG. 2****FIG. 3****FIG. 4****FIG. 5****NOTICE**

DO NOT EXCEED THE LOAD CAPACITY THAT IS SPECIFIED BY THE VEHICLE MANUFACTURER. EXCESSIVE LOADING ON THE TRUNK LUGGAGE RACK MAY CAUSE LOSS, DAMAGE TO THE MOTORCYCLE OR INJURY. BIG BIKE PARTS IS NOT RESPONSIBLE FOR LOSS, DAMAGE OR INJURY CAUSED DUE TO EXCESSIVE LOADS OVER THE VEHICLE MANUFACTURER'S LOAD SPECIFICATIONS ON THE LUGGAGE RACK.

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

BIG BIKE PARTS®

Copyright© 2023 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

INSTALLATION INSTRUCTIONS

PART NO. 91-307/91-307BK

TOUR LUGGAGE RACK

FITMENT: YAMAHA STAR VENTURE 2018-NEWER

TOOLS NEEDED:

DRILL

5/16" (10MM) DRILL BIT

MASKING TAPE

TAPE MEASURE

10MM SOCKET WRENCH

4MM ALLEN WRENCH

PHILLIPS SCREWDRIVER

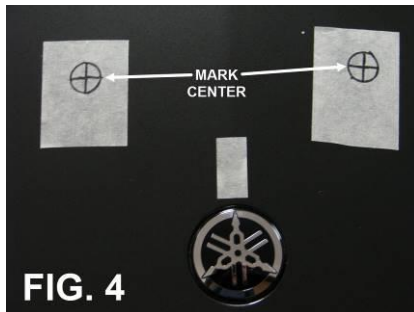
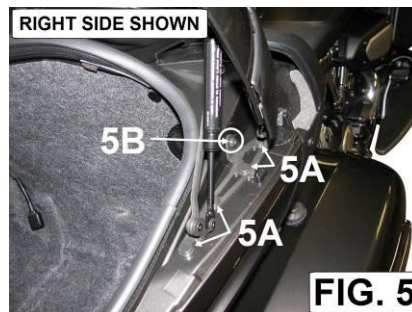
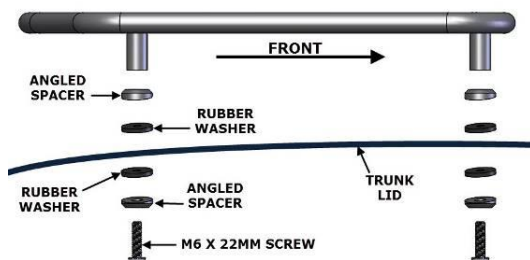
REMOVABLE THREAD LOCK

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. USE REMOVABLE THREAD LOCK ON ALL FASTENERS.

ESTIMATED INSTALLATION TIME: 60 TO 90 MIN.

INSTALLATION:

1. CLEAN THE TRUNK LID.
2. USING A TAPE MEASURE FIND THE CENTER OF THE TRUNK LID. USE TWO SMALL PIECES OF MASKING TAPE TO MARK THE CENTER LINE. SEE **FIG.1**.
3. HOLD THE RACK ABOVE THE TRUNK LID IN THE POSITION YOU WISH TO MOUNT IT. USE THE CENTER LINE MARK AS REFERENCE POINT.
4. PLACE FOUR PIECES OF MASKING TAPE ON THE TRUNK LID WHERE THE LEGS WILL TO BE. SEE **FIG.1**.
5. SET THE RACK ON THE LID WITH THE LEGS RESTING ON THE MASKING TAPE. CAREFULLY CHECK THE ALIGNMENT OF THE RACK. SEE **FIG. 2**.
6. USING A MARKER CIRCLE AROUND THE BOTTOM OF EACH LEG ON THE MASKING TAPE. SEE **FIG. 3**.
7. REMOVE THE RACK AND MARK THE CENTER OF EACH CIRCLE AS SHOWN IN **FIG. 4**. MEASURE THE MARKS TO MAKE SURE THEY ARE CENTERED.
8. REMOVE THE TRUNK LID FROM THE TRUNK. FIRST USING A 10MM SOCKET WRENCH REMOVE THE FOUR NUTS ON THE INSIDE-BOTTOM OF BOTH TRUNK HINGES MARKED **5A** IN **FIG. 5**.
9. USING A 4MM ALLEN WRENCH REMOVE THE TWO SCREWS MARKED **5B** WHILE HOLDING THE TRUNK LID. LIFT THE LID STRAIGHT UP TO REMOVE.
10. PLACE THE TRUNK LID TOP DOWN ON A CLEAN TOWEL.
11. USING A PHILLIPS SCREWDRIVER REMOVE THE **26** SCREWS SHOWN IN **FIG. 6**. LIFT THE TRUNK LID LINER TO REMOVE IT.
12. TURN THE OUTER LID OF TRUNK OVER AND USING A DRILL AND A 5/16" BIT DRILL FOUR HOLES IN THE LOCATION YOU MARKED IN **STEP 7**.
13. REMOVE THE MASKING TAPE AND ANY BURRS AND INSTALL THE RACK TO THE LID USING THE SUPPLIED HARDWARE AS SHOWN IN **FIG. 7**.
14. ROTATE THE ANGLED SPACERS TO BEST FIT THE TRUNK LID AS YOU TIGHTEN EACH OF THEM.
15. REASSEMBLE THE LINER TO THE TRUNK LID AND THEN INSTALL THE ASSEMBLY TO THE TRUNK.

**FIG. 1****FIG. 2****FIG. 3****FIG. 4****FIG. 5****FIG. 6****FIG. 7****NOTICE**

DO NOT EXCEED THE LOAD CAPACITY THAT IS SPECIFIED BY THE VEHICLE MANUFACTURER. EXCESSIVE LOADING ON THE TRUNK LUGGAGE RACK MAY CAUSE LOSS, DAMAGE TO THE MOTORCYCLE OR INJURY. BIG BIKE PARTS IS NOT RESPONSIBLE FOR LOSS, DAMAGE OR INJURY CAUSED DUE TO EXCESSIVE LOADS OVER THE VEHICLE MANUFACTURER'S LOAD SPECIFICATIONS ON THE LUGGAGE RACK.