

SHOW CHROME®

Copyright© 2022 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

INSTALLATION INSTRUCTIONS

PART NO. 44-106/44-106BK

DESCRIPTION: FLAG POLE – NON-FOLDING

ESTIMATED INSTALLATION TIME: 10 TO 15 MIN

FITMENT: POLARIS SLINGSHOT 2015 – NEWER

TOOLS NEEDED:	REMOVABLE THREAD LOCK	4MM ALLEN WRENCH	T40 TORX		
INCLUDED:	FLAG MOUNT (1X)	FLAG POLE ASSEMBLY (1X)	U.S. FLAG (1X)	M6 FLAT WASHER (2X)	M6-1.0X16MM SCREW (2X)
EXTRA ITEMS (NOT NEEDED):	N/A				

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. *USE REMOVABLE THREAD LOCK ON ALL FASTENERS*


INSTALLATION:

1. ASSEMBLE THE FLAG ONTO THE FLAG POLE BY REMOVING THE RUBBER O-RING FROM THE FLAG POLE AND SLIDING THE FLAG ONTO THE BOTTOM OF THE FLAG POLE WITH THE RUBBER O-RING REINSTALLED UNDER THE FLAG TO HOLD IT FROM SLIDING DOWN (FIG. 1).
2. USE A 4MM ALLEN WRENCH TO INSTALL THE FLAG POLE ONTO THE FLAG MOUNT USING THE TWO M6 FLAT WASHERS AND M6-1.0X16MM LONG BUTTON SOCKET HEAD SCREW ACCORDING TO FIG. 1 USING REMOVABLE THREAD LOCK ON THE HARDWARE. **NOTE: BE SURE FLAG POLE FOLDS FORWARD TOWARDS THE MOUNT BEFORE TIGHTENING COMPLETELY.**
3. USING A T40 TORX, REMOVE THE SCREW FROM THE BACK SIDE OF THE ROLL HOOP TRIM (FIG. 2). THIS SCREW WILL NOT BE REUSED. **NOTE: THIS FLAG POLE CAN BE MOUNTED IN ANY OF THE 4 SCREW LOCATIONS ON THE BACK SIDE OF THE ROLL HOOP TRIM.**
4. INSTALL THE FLAG POLE ASSEMBLY TO THE REAR OF THE ROLL HOOP WHERE YOU REMOVED THE SCREW IN STEP 1 USING THE M6-1.0X16MM LONG BUTTON SOCKET HEAD SCREW AND A 4MM ALLEN WRENCH (FIG. 3).

FIG. 1




FIG. 2

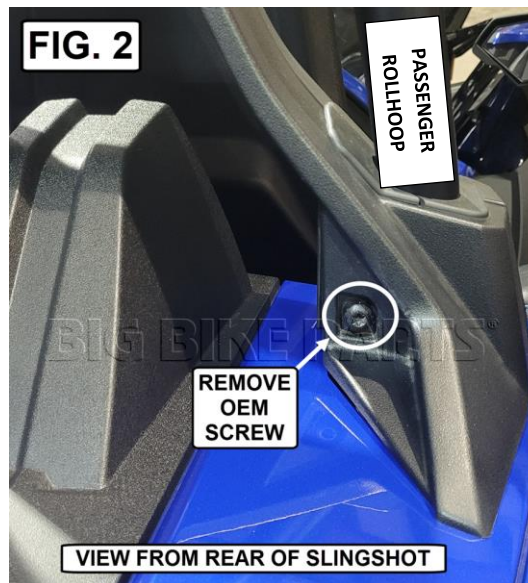

VIEW FROM REAR OF SLINGSHOT

FIG. 3

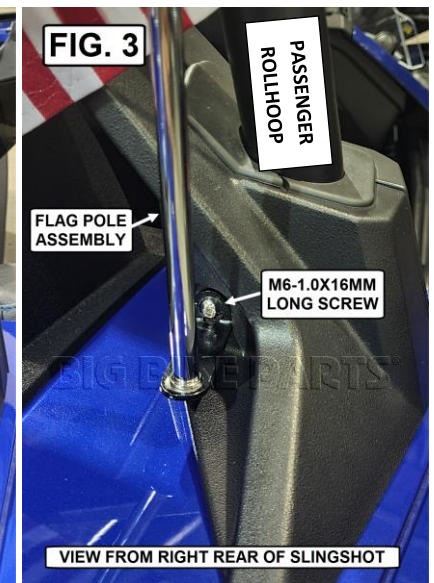

VIEW FROM RIGHT REAR OF SLINGSHOT

WARNING

THREADLOCK CAUSES PLASTICS TO CRACK, BREAK OR BECOME BRITTLE. WHEN USING THREADLOCK TO INSTALL HARDWARE WITH PLASTIC COMPONENTS, ONLY APPLY TO METAL COMPONENTS. IT IS CRITICAL THAT ANY EXCESS THREADLOCKER OR SPILLAGE IS CLEANED COMPLETELY FROM PLASTIC COMPONENTS IMMEDIATELY BEFORE DRYING. A DAMP TOWEL OR RAG IS THE BEST WAY TO ACHIEVE THIS. IF EXCESS THREADLOCKER IS NOT CLEANED UP RIGHT AWAY, IT COULD LEAD TO DAMAGED PRODUCTS AND VOID WARRANTY.

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTIONS MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.